



MAINTAINING TENTS

This guide contains some simple suggestions on how to maintain tents.

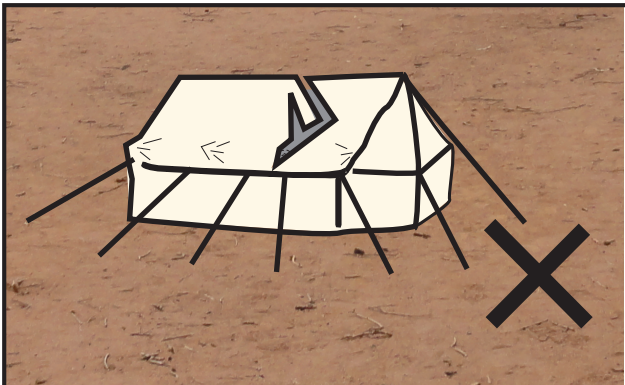


Do not let sharp sticks touch the tent.

They will rip the canvas.

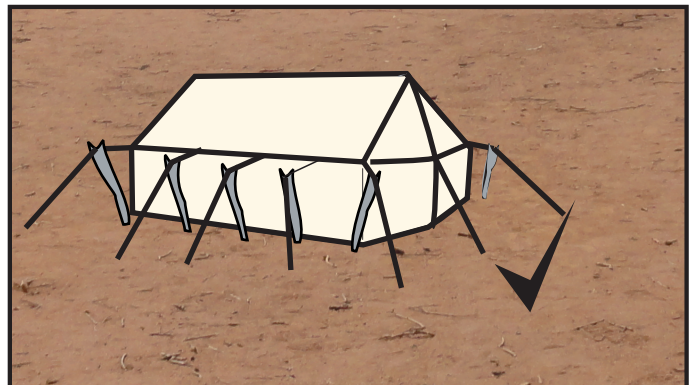


Try to put pegs 2m away from the tent

If there is no space you can put forked sticks outside to raise the ropes

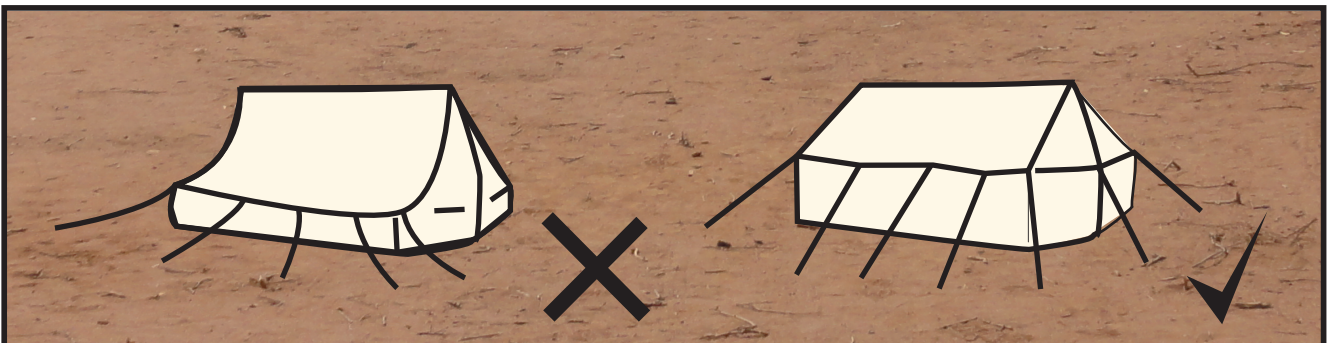

Keep ropes tight.


This will prevent the canvas from flapping in the wind and damaging the tent.

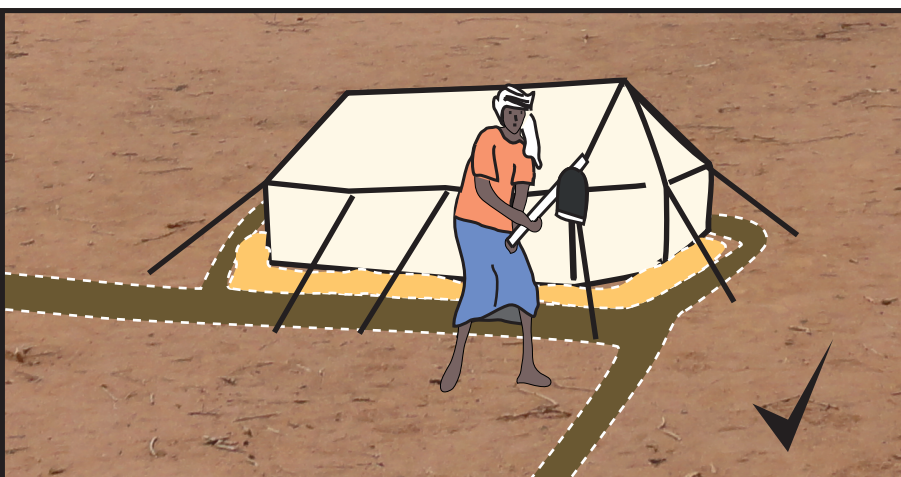

Dig drainage ditches

To prevent flooding they should be 30cm deep.

**BEWARE
OF FIRE**

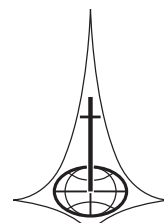

THE LUTHERAN
WORLD FEDERATION
A Communion of Churches